



Panel Elevation

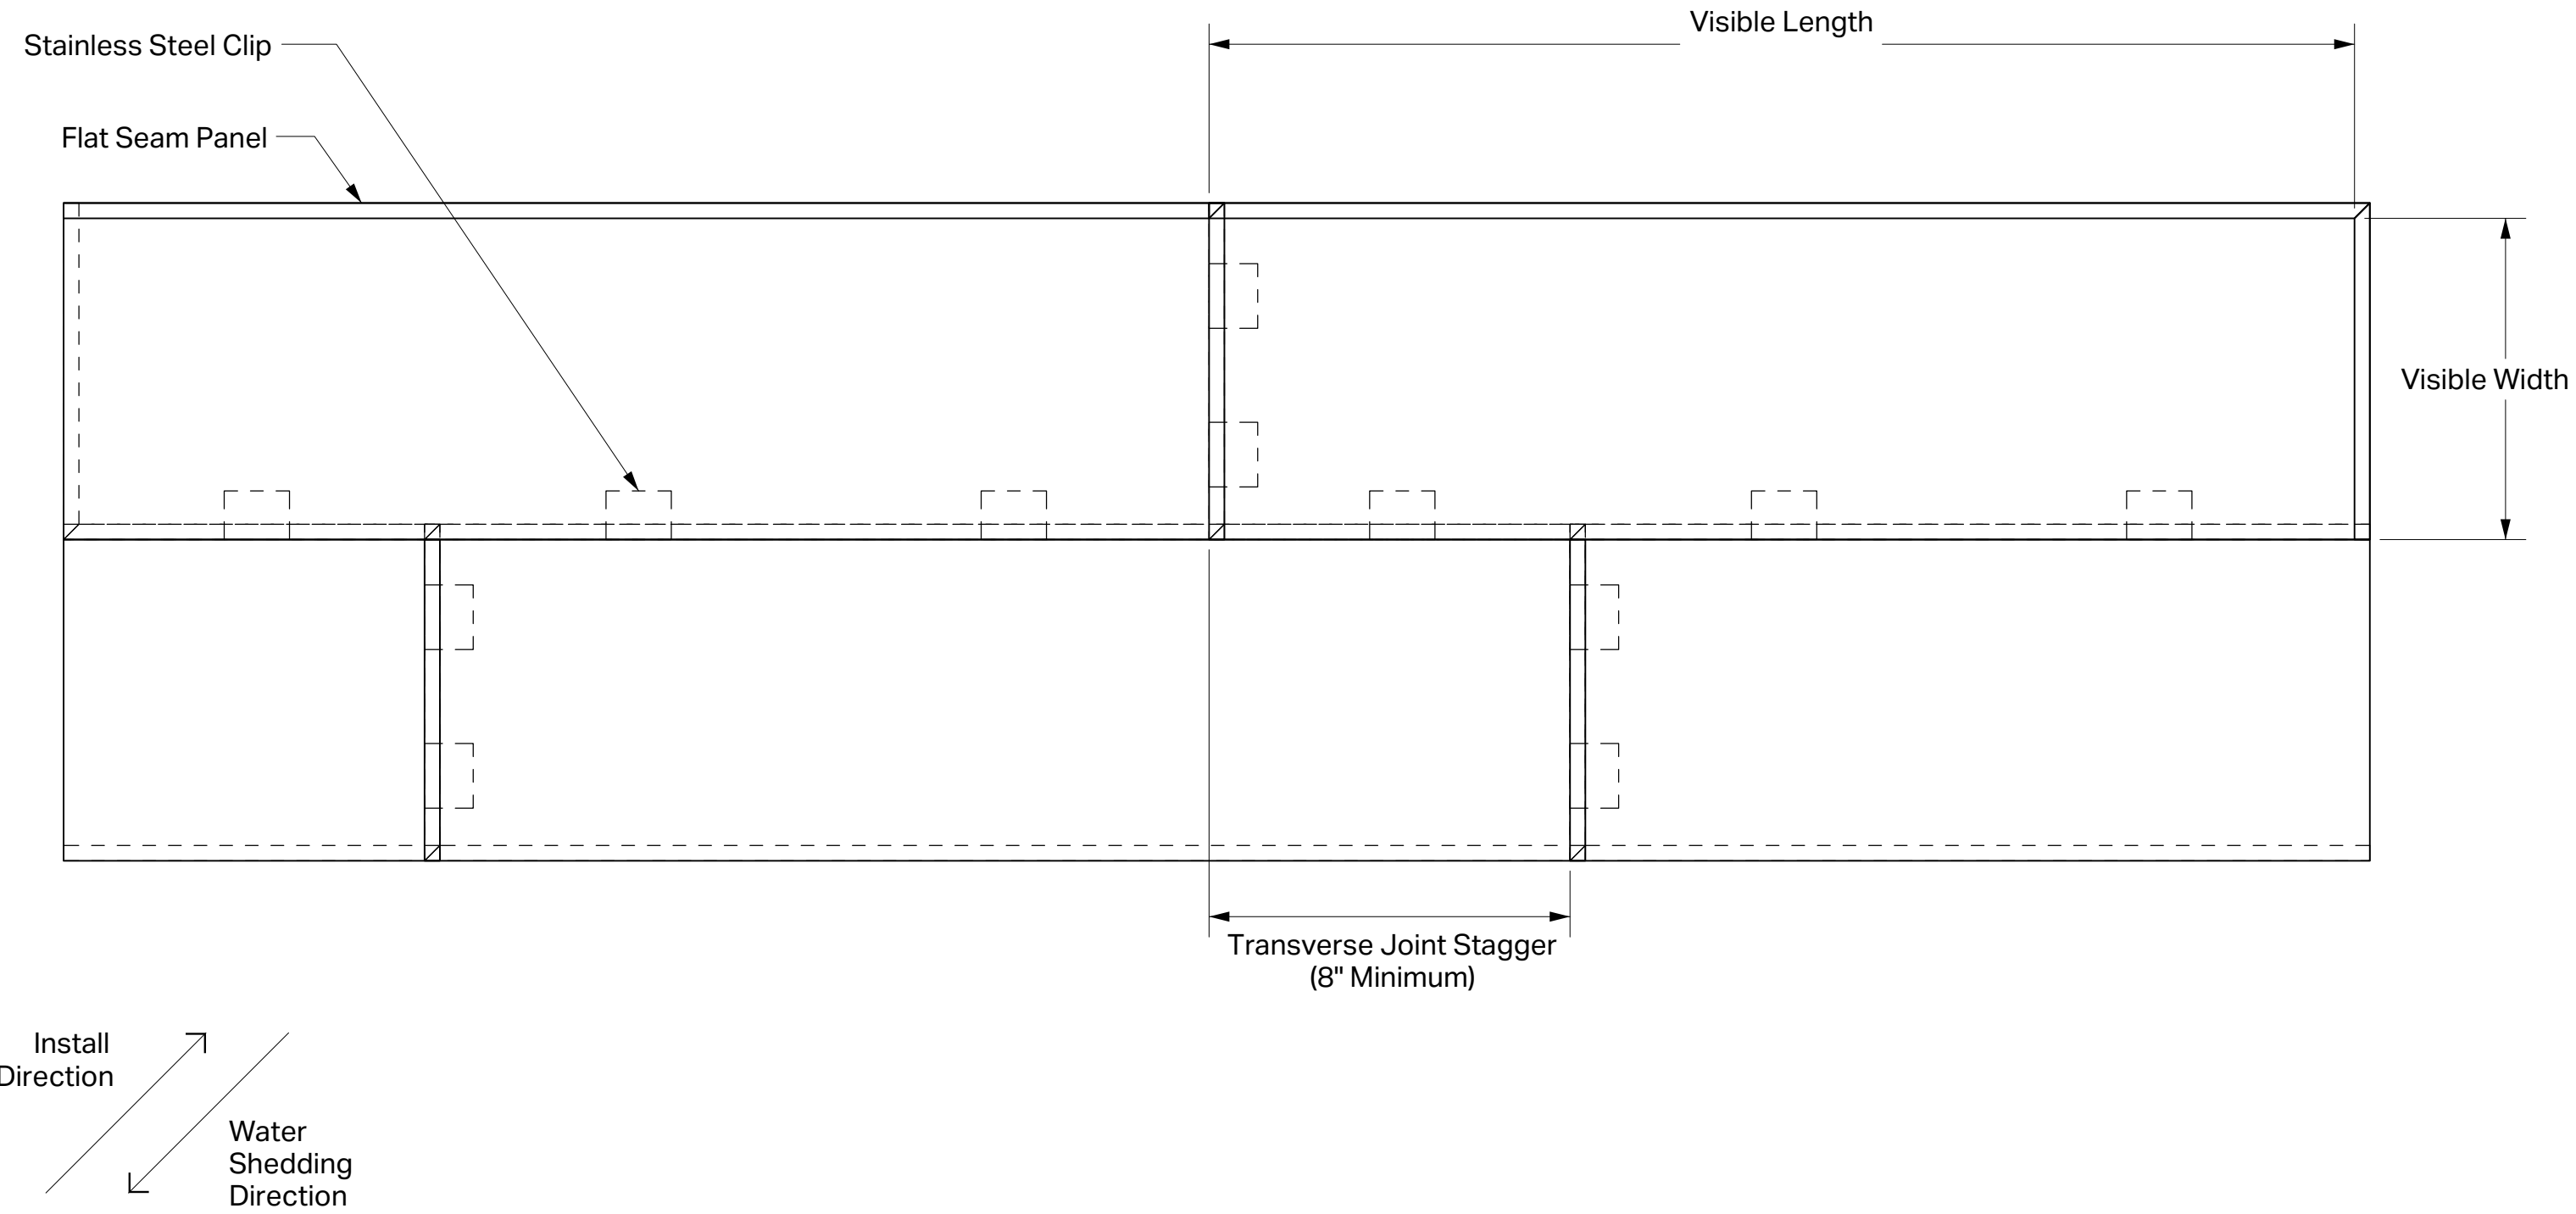


Typical Panel Joint - Section Detail


NOTE: Only for slopes >2/12
Zinc skins require
structural underlayment
on top of weather barrier
Copper panels require
rosin paper underlayment

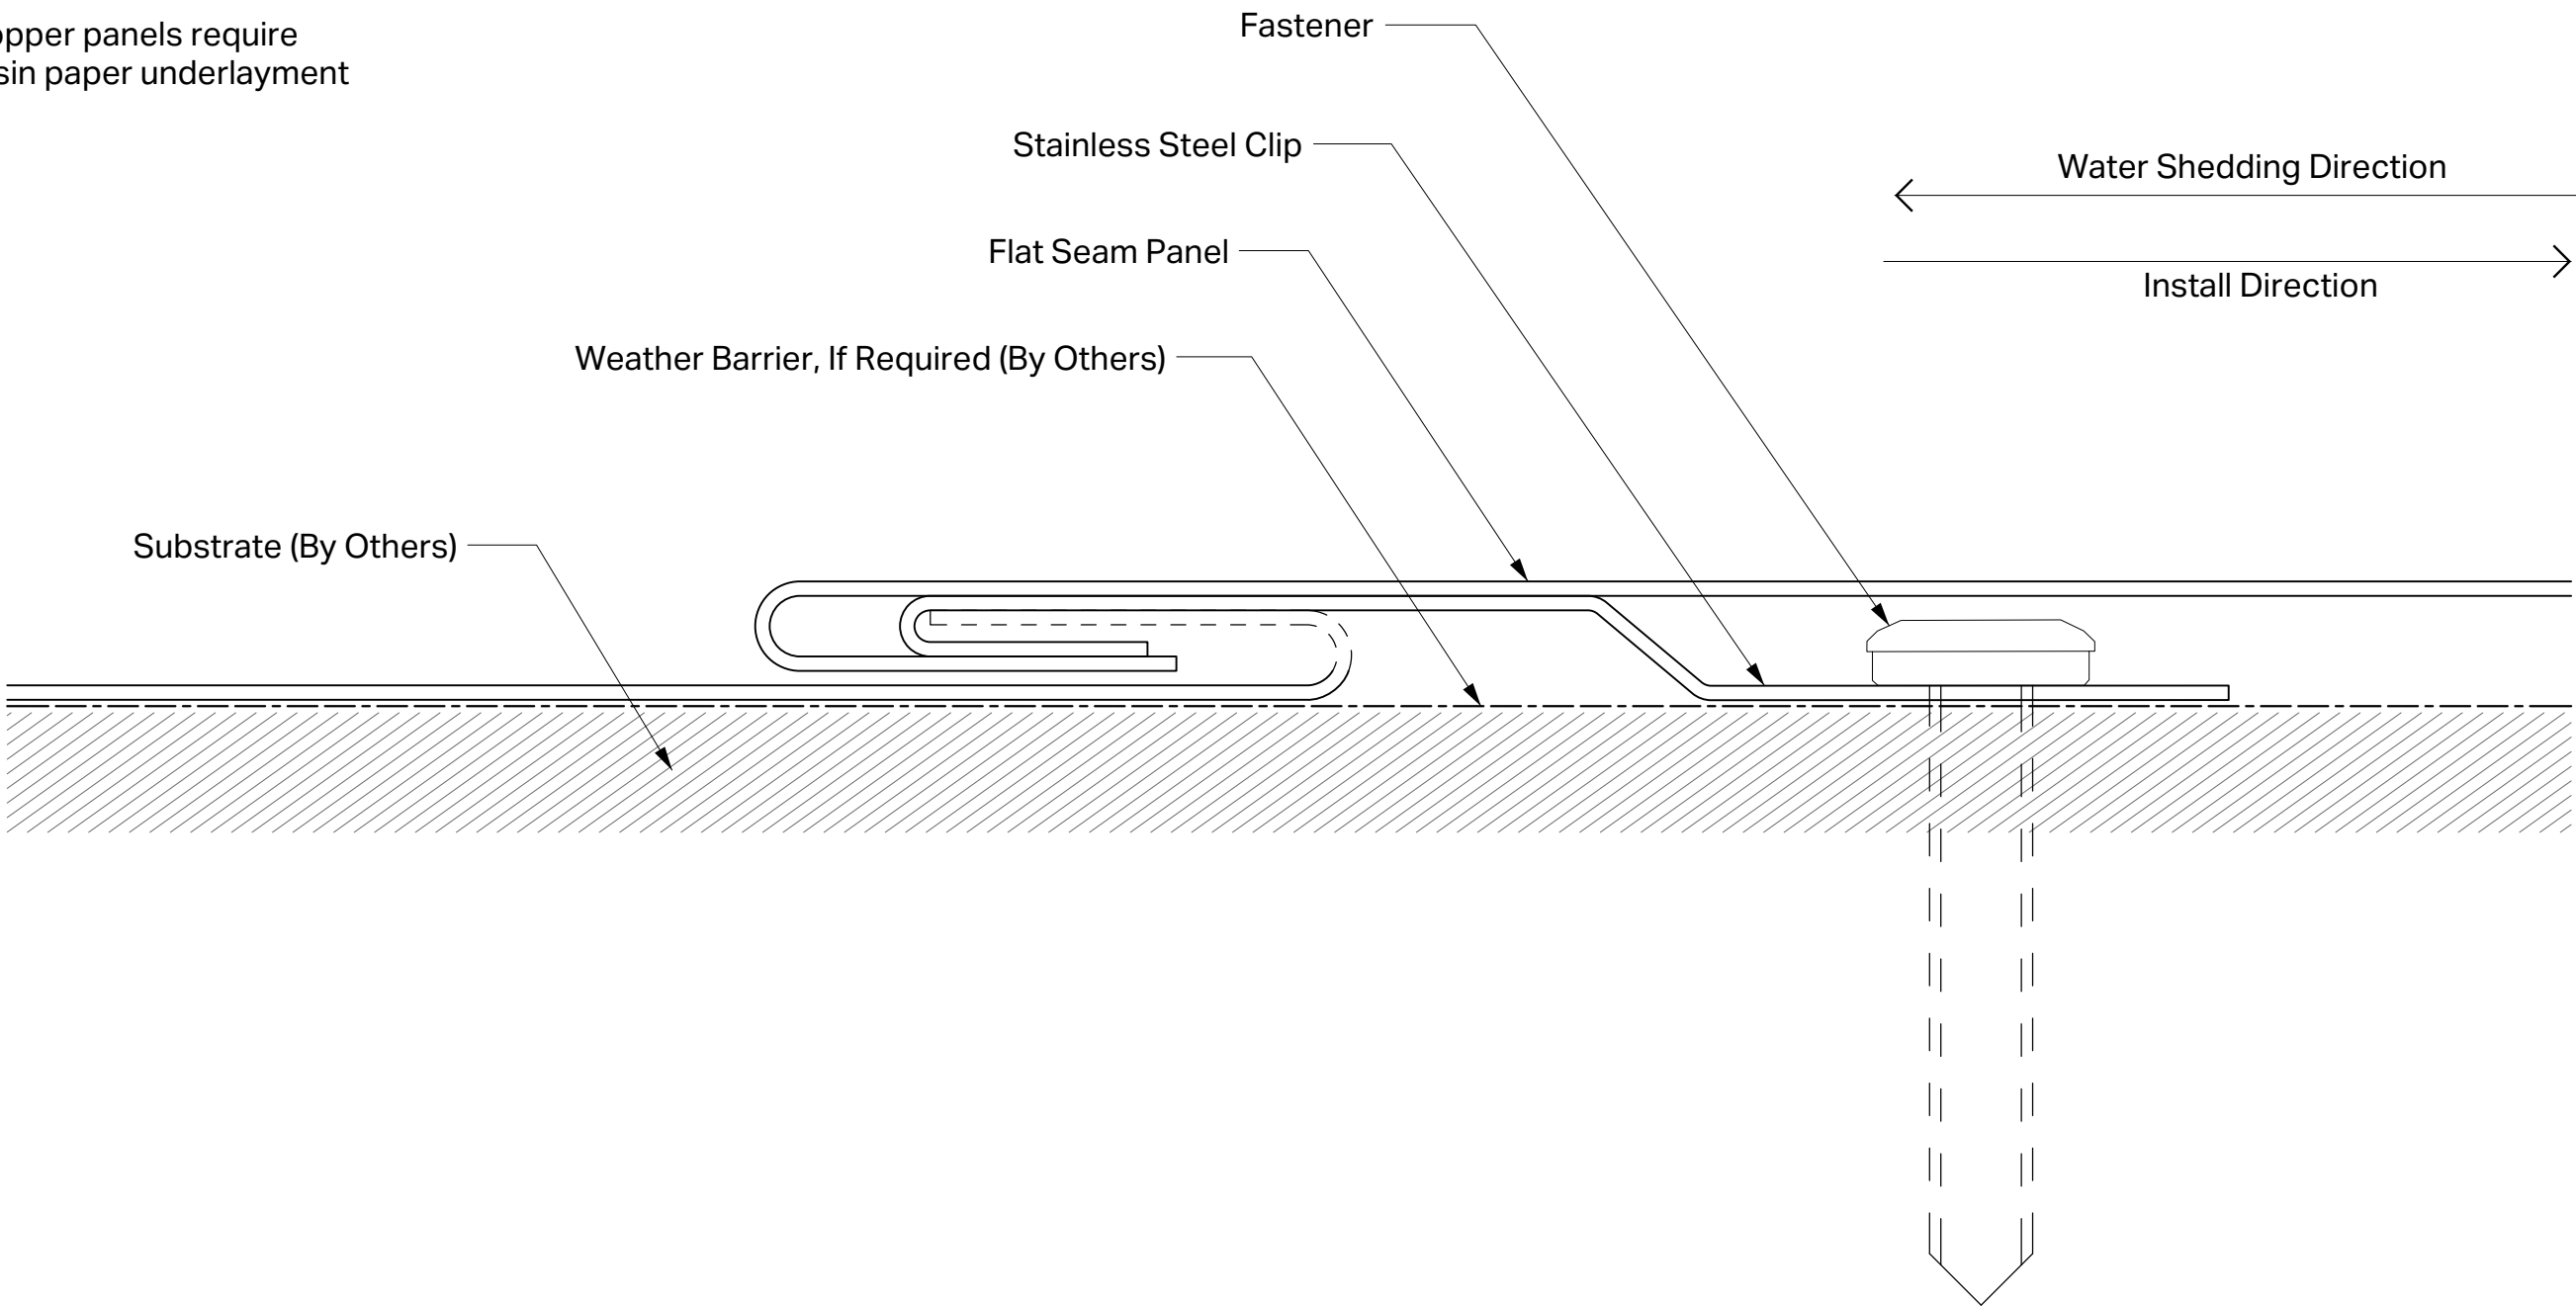

Starter / Inside Corner - Section Detail

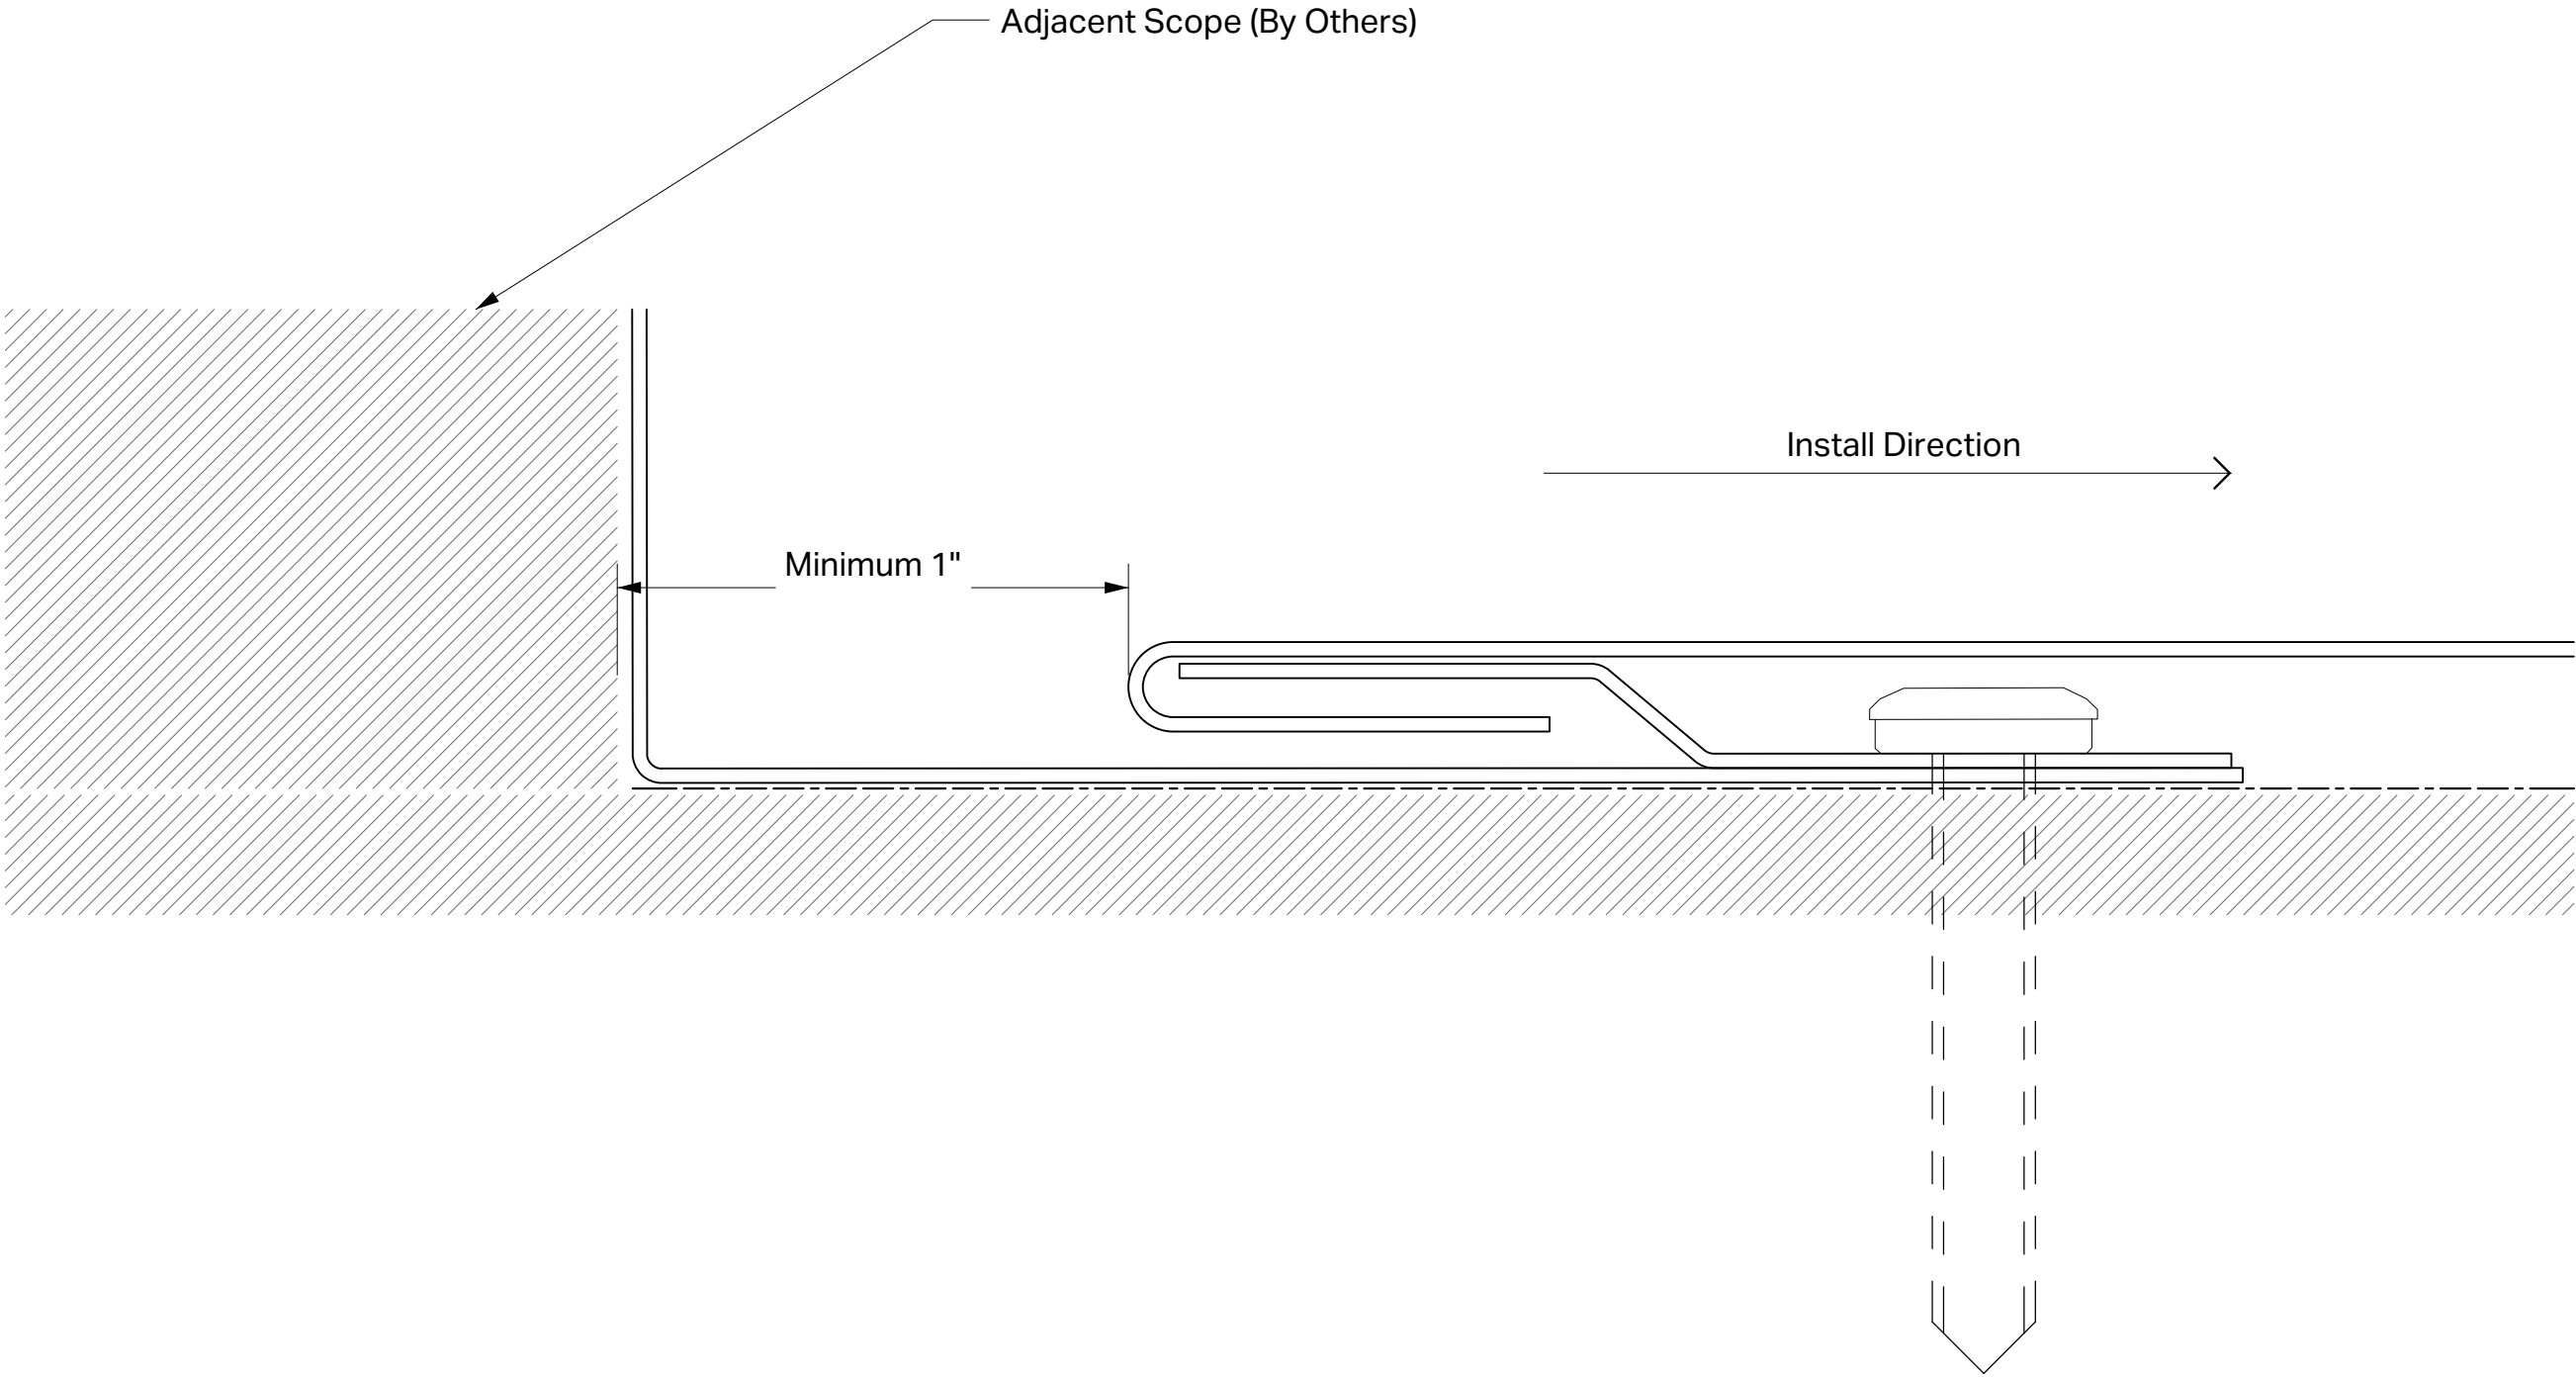

Starter / Outside Corner - Section Detail

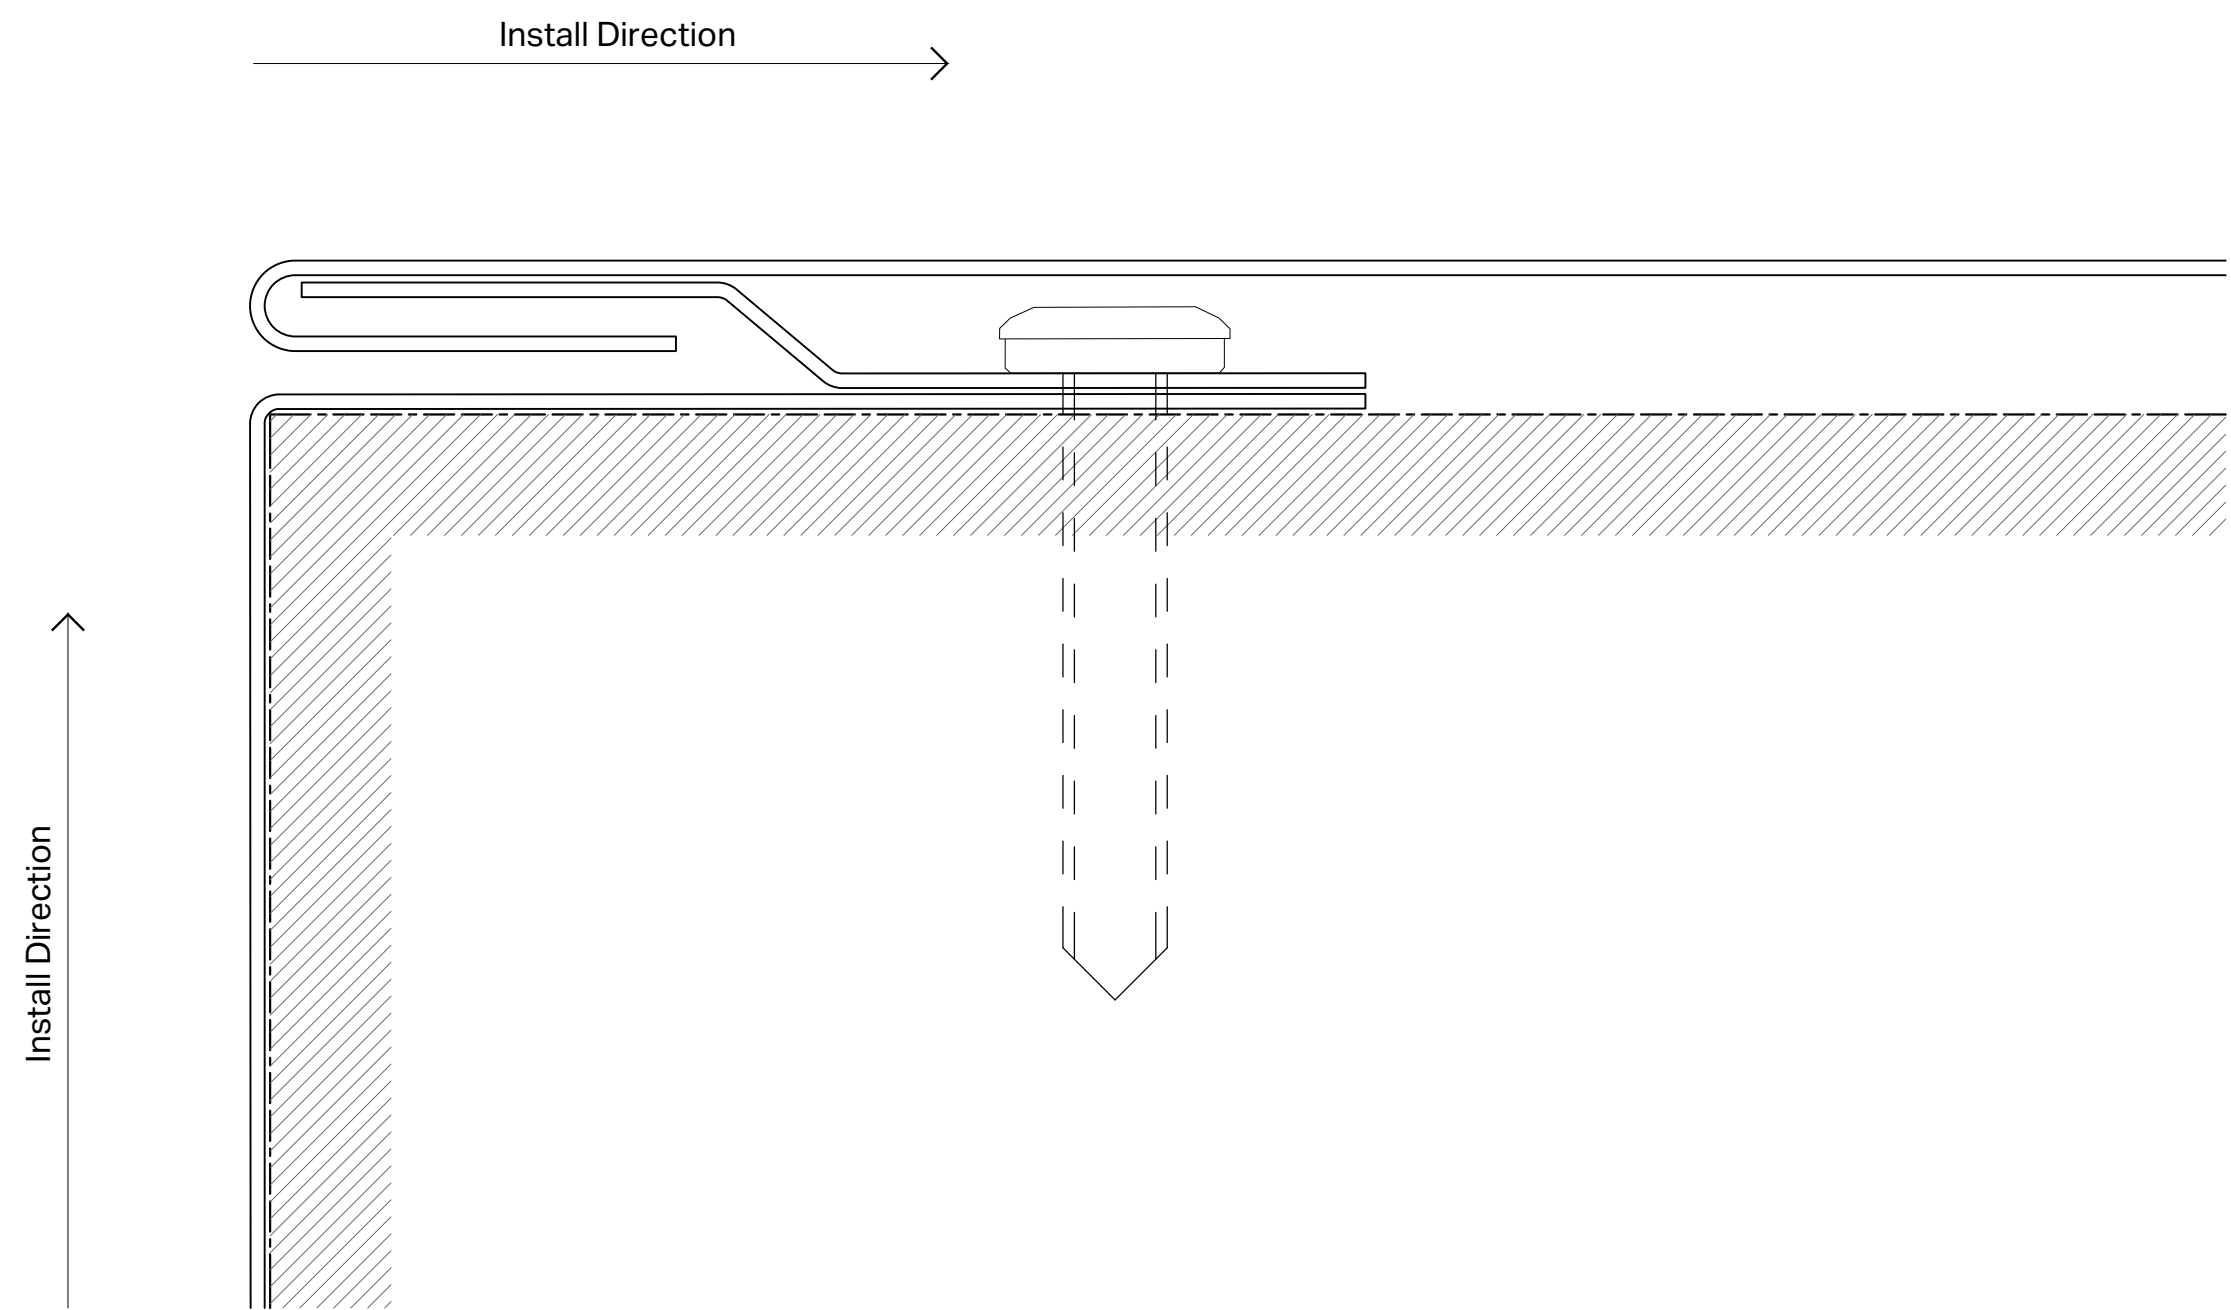

Finisher - Section Detail

