
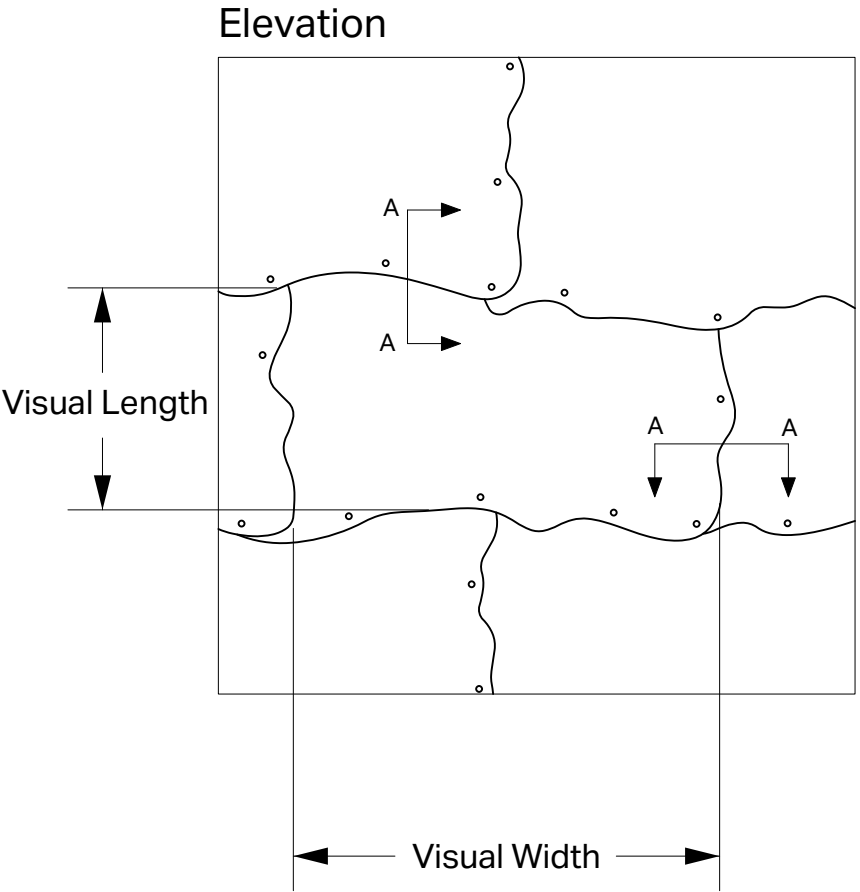



# Flat Lap - Classic Layout

NOTE: Zinc skins require structural underlayment on top of weather barrier  
Copper panels require rosin paper underlayment

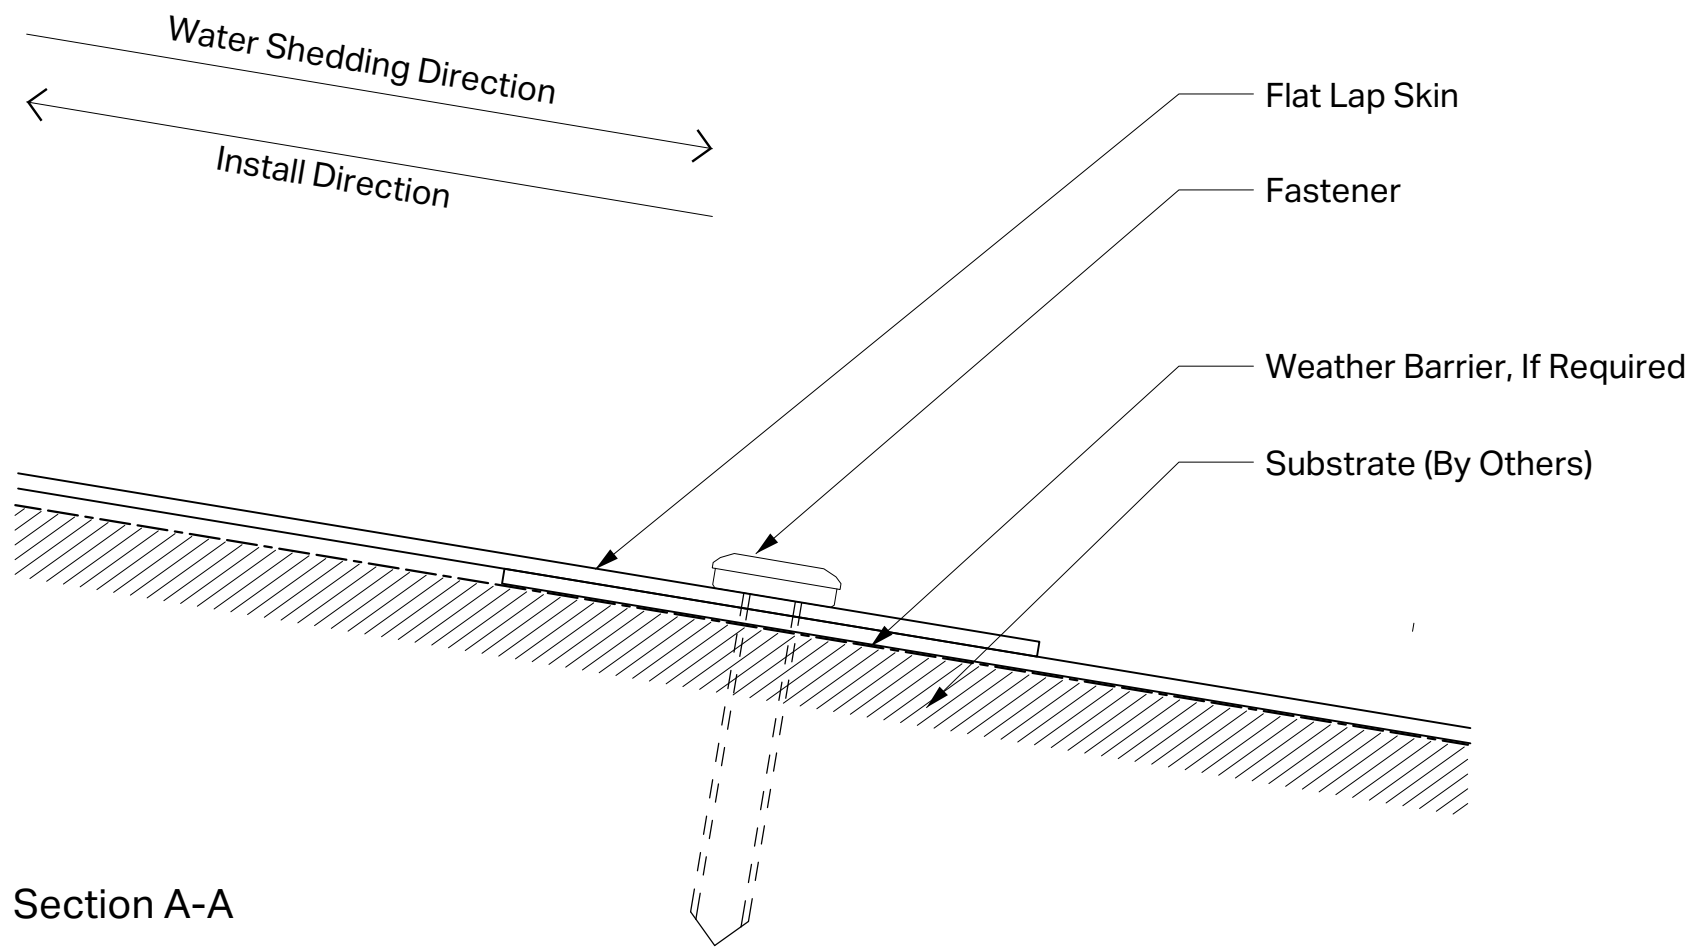


# Flat Lap - Butt Joint Layout



NOTE: Zinc skins require structural underlayment on top of weather barrier  
Copper panels require rosin paper underlayment

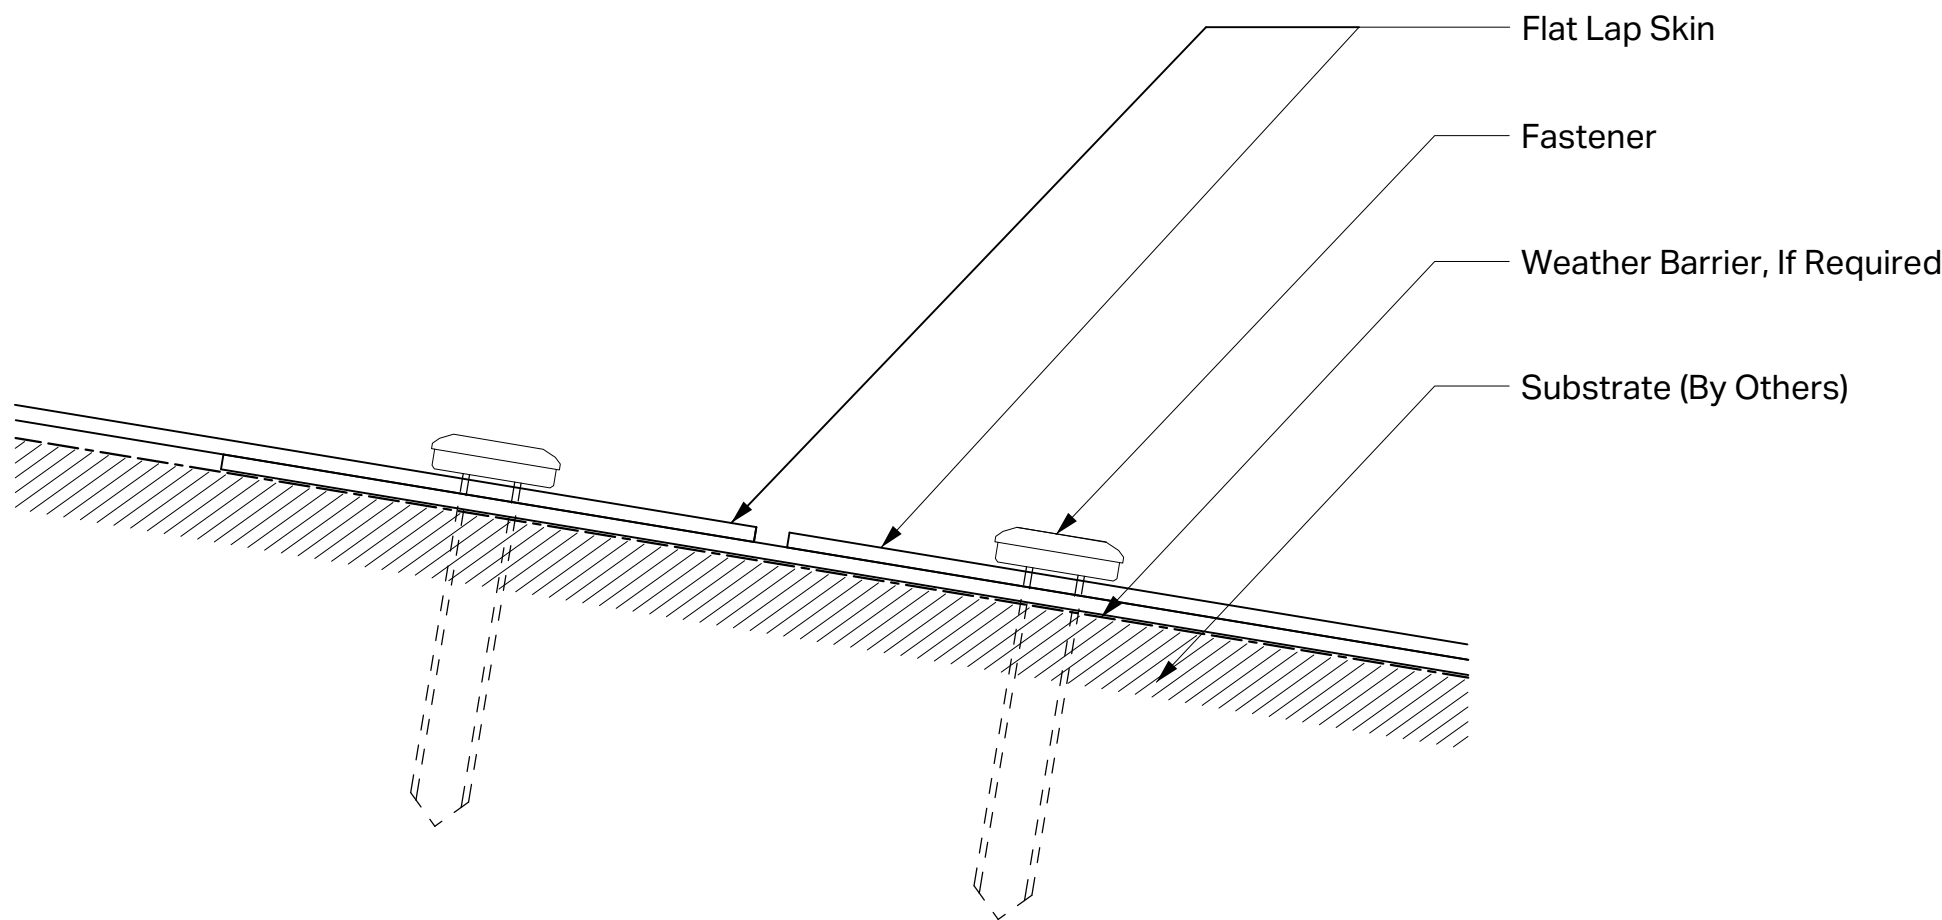

Section B-B

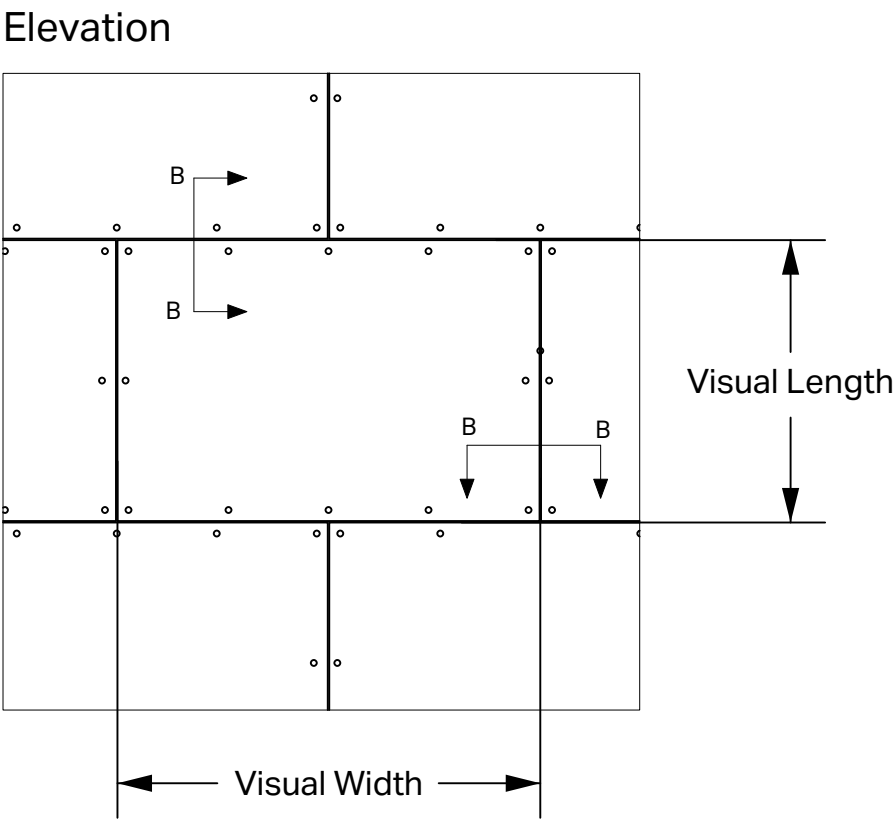

# Flat Lap - Shingle Layout

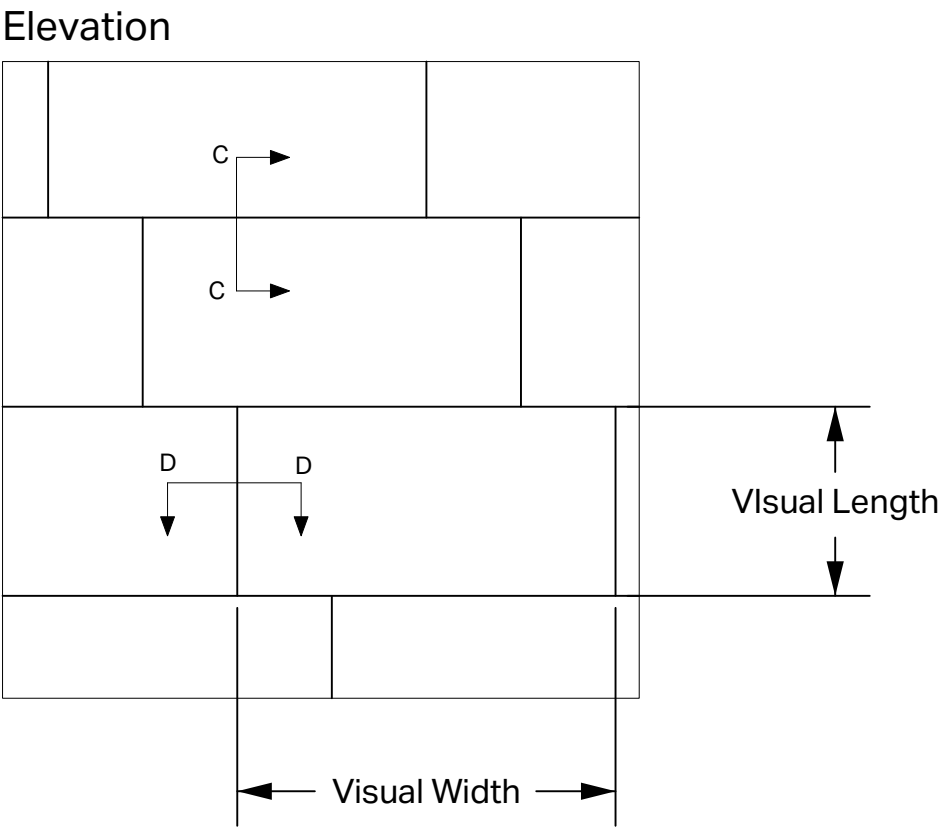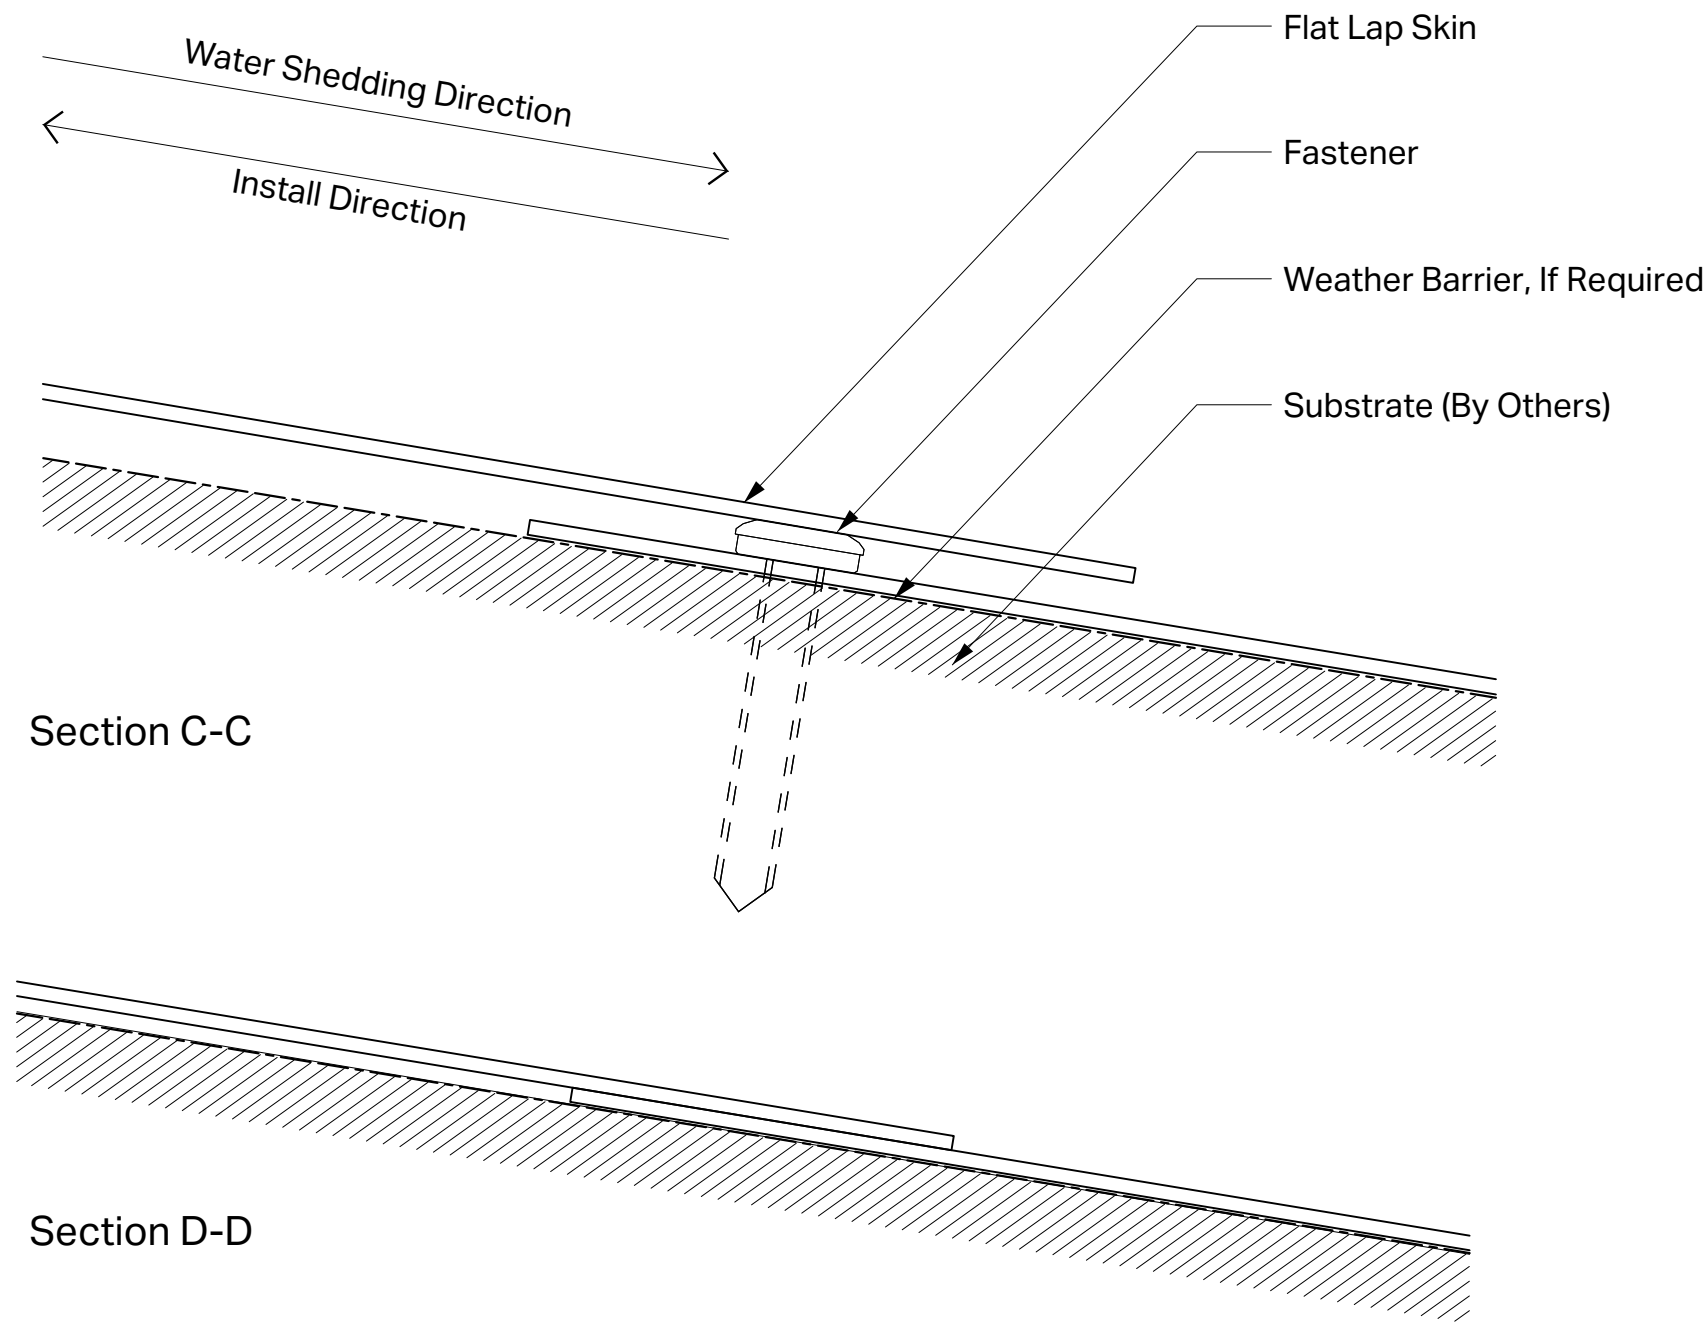

NOTE: Zinc skins require structural underlayment on top of weather barrier  
Copper panels require rosin paper underlayment